


## Installation Instructions

### 2018+ WRX Front View Monitor T-Harness For use with OEM camera P/N 86357VA010

**Step 1:** Remove bumper. 3x clips + 6x 10mm bolts under the hood, 1 clip in each wheel well, 9 clips underneath.

**Step 2:** Locate the gray 13-pin connector above the washer fluid reservoir. Press the locking tab to release & disconnect.

**Note:** Connector can be removed by releasing the pin holding it in place to make this step easier. A small flathead screwdriver may help with releasing the tab if it's difficult to press or stuck.

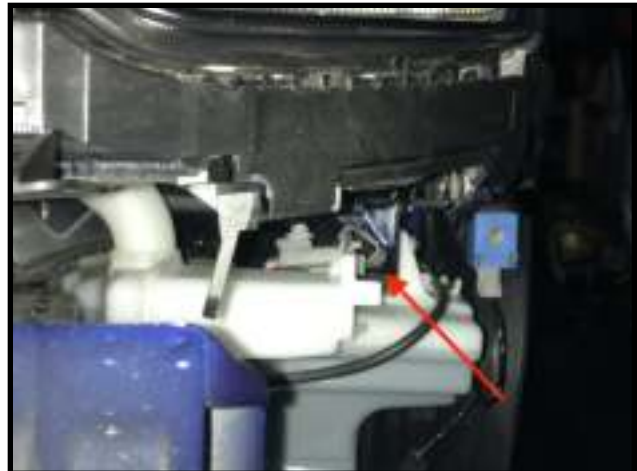

**Step 3:** Plug the 13-pin T-harness connectors into each side of the 13-pin connector.



**Step 4:** Route the 8-pin connector towards the front of the vehicle. A pickup tool, coat hanger, stiff piece of wire, or long zip tie can help with this.

**Note:** Be careful to not interfere with existing harnesses or damage the 8-pin connector during this step.



**Step 5:** Snap the 8-pin connector into place on the front bumper beam.

**Tip:** Use a wire tie to attach T-harness to the horn wiring to prevent it from moving around. See arrow for location.



**Step 6:** Tuck the wiring under the foam below the radiator to keep it in place, routing around the ambient temp sensor bracket.



**Step 7:** Use a wire tie to secure the T-harness to the fog light wiring.



**Step 8:** Connect your OEM front camera (P/N 86357VA010) to the 8-pin connector.

**Note:** Slide the black clip onto the bumper beam.



**Step 9:** Turn vehicle to ON or start engine. Press [Enter] on the MFD to test camera functionality. If image is not displayed, check connectors to make sure they are fully seated, cycle ignition off then back on, and test again.



**Step 10:** Reinstall bumper. Installation complete!

